

Mounting instruction

Rounded Showcase End module 400 mm

Extension Module

Item.no: Midi | IS-9432-1 Maxi | IS-9432-2

Complete with:


-	Midi IS-9432-1	Maxi IS-9432-2
1 2 Base post, 750 mm, adjustable foot	IS-W750-EBM	IS-W750-EBM
2 2 Extension post, 750 mm	IS-0750-EEM	IS-0750-EEM
3 2 Top post, 755 mm	IS-0755-ETM	IS-0755-ETM
4 2 Extension post, 200 mm		IS-0200-EEM
5 2 Straight beam, 400	IS-400-BS	IS-400-BS
6 2 Straight beam, 800	IS-800-BS	IS-800-BS
7 2 Table shelf, 400	IS-9614	IS-9614
8 2 Corner trims, 565	IS-0565-CT	IS-0565-CT
1 Hanger (Special)	IS-706-HN	IS-706-HN
1 Kicker & Hanger	IS-800-KHN	IS-800-KHN



Accessories

Extra Floating Shelf, item IS-9616







2 Attach a table shelf so that the top of the horizontal beam is 890mm / 35" from the bottom of the post.



3 Mount the graphic panel inside the show case and push down the top table shelf to fit the graphic panel.




Attach the graphic panels and complete your module by installing corner trims along both edges between the table shelves.


Please observe: You can place the shelves at different heights and make the opening as big as you wish, but then you must adjust the graphic dimensions and corner trims accordingly.




Graphic panel production

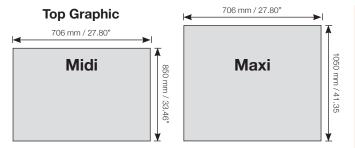


Showcase 400 mm / 15.75"



Bottom Graphic

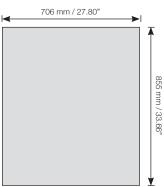

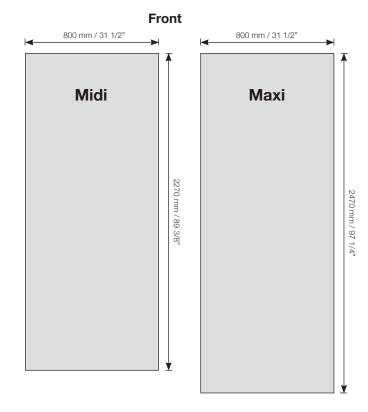

Graphic panel attachments

Accessories

800 mm / 31.5"

Kickers & Hangers

(incl. for the first set of panels) 400 mm / 15.75"

Item IS-400-KHN Item IS-800-KHN

Magnetic tape (not incl.) 12 mm/0.5". Item 82281

Printer material

We recommended the following material:

Poster paper: 180 gr / 0.4 lb.

The printed graphic panels must be laminated before use. Front side: 125 microns (0,125 mm) / 0.005" Reverse side: 250 microns (0,250 mm) /0.010""stop light"

Polyester film: 330-370 microns (0,350 mm) / 0.013-0.015" Top laminate: 125 microns (0,125 mm) / 0.005"





Kicker

Hanger

Mounting of Kickers and Hangers

Kickers and hangers to be fixed at the bottom and at the top of the graphic panels (reverse side).

Mounting of Magnetic Tape

MPORTANT Carefully mount the magnetic tape slightly inset from the edge of the graphic panel by approximately 0,25 mm / 0.010". Once mounted, a very thin straight white line should show between the edge of the graphic and the outside edge of the magnetic tape. Do not exceed 0,5 mm/0.020".

Horizontal magnetic tape directly below hanger strip

Top Graphic

Vertical magnetic tape on edge of the graphic

Horizontal magnetic tape

Showcase

Magnetic tape on all edges of the graphic

Bottom Graphic

Magnetic tape on all edges of the graphic

Front



Kicker strip



Mark Bric Display Corp.

North America Tel. 800.742.6275 Fax 800.565.9506 E-mail: markbric@markbric.com

Mark Bric Display AB